



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

Li'l Bud-D 5-Gallon DosaCart

ASSEMBLY INSTRUCTIONS


Part #: HS15-5

(5-Gallon cart with bucket and lid fits 7 GPM, 11 GPM, and 14 GPM.
Dosatron, Quick Hook-Up Kit and Cart sold separately.)





Install the mounting bracket, included with your Dosatron pump, to the Li'l Bud-D cart using the hardware kit provided.

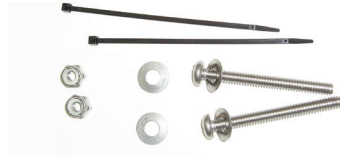

Assemble the Quick Hook-Up Kit with the unit using the Quick Hook-Up Kit instructions included with the kit. (D14 unit pictured as example) **NOTE:** Be cautious not to use excessive force when attaching the fittings onto blue housing of unit.



Attach the Dosatron unit and the Quick Hook-Up Kit onto the unit bracket. Secure with the unit strap.

CALL 1-800-523-8499 FOR SUPPORT

4



Use the supplied zip ties to attach the hoses to the eye hooks.

5




Insert the hose through the opening of the bucket lid.

6



Remove the hose nut from the unit. Insert the hose through the nut and attach to the bottom end of the unit barb.

7

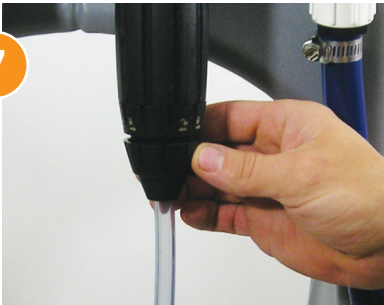

Tighten the hose nut onto bottom of the unit.